

Before You Start FieldWiz






Sensor FieldWiz V2 - Before You Start

Thank you for choosing FieldWiz.

Before you start using your FieldWiz sensors for the first time, it is important to activate each of them.

1. To activate your sensors, follow the instructions available on <http://help.asi.swiss>
2. Then go to the FieldWiz V2 section and open [How To Activate Your FieldWiz V2](#)
3. For a direct access to the page scan the QR code

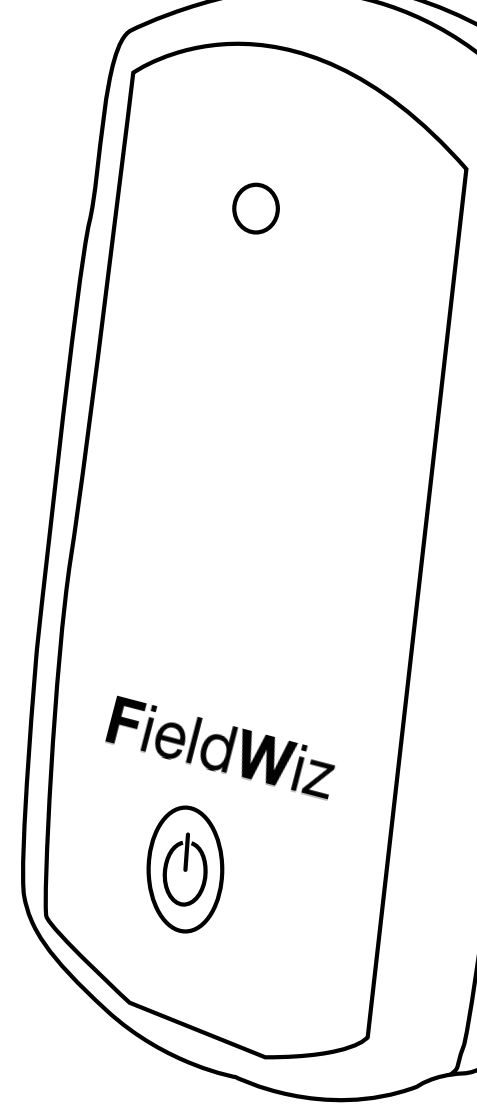

Sensor FieldWiz V2 - Before You Start

Now that your FieldWiz is activated, you must configure your account and sensors.

1. Create your account: <https://analyze.fieldwiz.com>



FieldWiz
an ASI brand

Email

Password

Login

1. No account yet? [Sign up here.](#)
[Forgot Password](#)

(you will receive a confirmation link by email)







2. Create a team

3. Create players

4. Configure your sensors

- a. Enter the player's settings
- b. Plug your sensor on the computer with the USB-C cable
- c. Click on "connect device" and select the related sensor

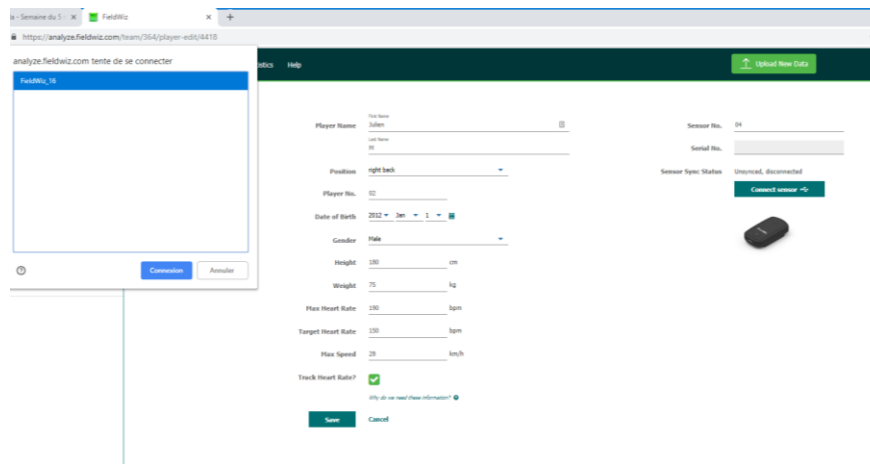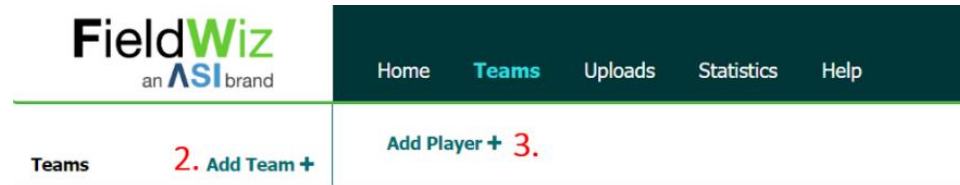


FieldWiz

d. Once the player settings are correct, click on **"Sync"**.

Important note: **The Sensor number must be unique**

e. Paste the sticker corresponding to the Sensor number on the sensor

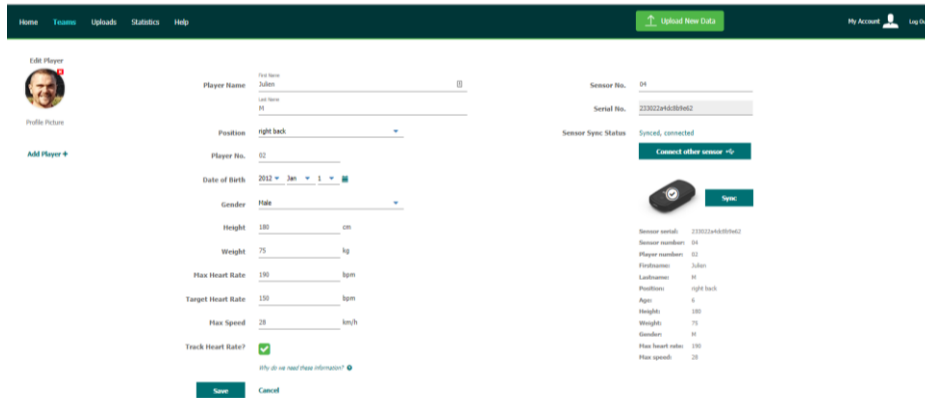

f. Repeat the action for each sensor

You are now ready to use your system

You can find detailed information and video tutorial on <https://help.fieldwiz.com>

Should you have any issue, thanks to write to support@fieldwiz.com

We wish you a great experience using FieldWiz.